

# U50F Repair Guide


2009/11/16  
Janmouss\_chang  
CSC-GRMA

## SYSTEM PAGE REF.

## U50F Main Board Schematics

### BLOCK DIAGRAM

PAGE	Content
1	Block Diagram
2	System Setting
3	CPU(1)_DMI,PEG,FDI,CLK,MISC
4	CPU(2)_DDR3
5	CPU(3)_CFG,RSVD,GND
6	CPU(4)_PWR
7	CPU(5)_HDP
16	DDR3 SO-DIMM_0
17	DDR3 SO-DIMM_1
18	DDR3 CA_DQ VOLTAGE
19	VID controller
20	PCIE_INDEX(1) SATA, IDE, PDC, LPC
21	PCIE_INDEX(2) PCIE, CLK, SUB, PEG
22	PCIE_INDEX(3) PDC, DMI, SYS PWR
23	PCIE_INDEX(4) DP, LVDS, CRT
24	PCIE_INDEX(5) PCI, MVRAM, USB
25	PCIE_INDEX(6) CPU, GPIO, MISC
26	PCIE_INDEX(7) POWER, GND
27	PCIE_INDEX(8) POWER, GND
28	PCIE_INDEX(9) ROM, OTH
29	CLK_IC951FR62
30	EC_IT8541(1/2)
31	EC_IT8541(2/2) KE, TP
32	RST_Reset Circuit
33	HANKSVILLE
34	LAN_R740
35	CODEC-ALC660
36	ADC_Amp & Jack
37	ADC_FMR010
38	CE_R5C830
39	CE_R5C830
40	CE_4in1 CardReader
41	CE_MiniCard
42	CE_Debug
43	CE_LCD Panel
44	CRT_D-Sub
45	Display Port
46	TV HDMI
47	FAN_Fan & Sensor
48	XDD_HDD & GDD
49	USB_Fan & +2
50	MINICARD(WLAN)
51	LED_Indicator
52	DG_Discharge
53	DC_DC & BATT Conn.
54	BT_Bluetooth
64	TUN_TV Tuner
65	ME_Conn & Skew Hole
66	ESA *****
67	PCIE_XDP, ONFI
70	VGA_HDMI
71	VGA_LVDS Switch
80	FW_VCORE (MAX17084)
81	FW_SYSTEM (MAX17020)
82	FW_I/O_VTT_CPU+1.1VM
83	FW_I/O_VTT_DDR+VTT+1.8VS
84	FW_I/O_VTM & ME_VTM_PWEGD
85	FW_VDDA_CORE (MAX17020)
86	FW_CHARGER (MAX17010)
87	FW_DETECT
88	FW_LOAD SWITCH

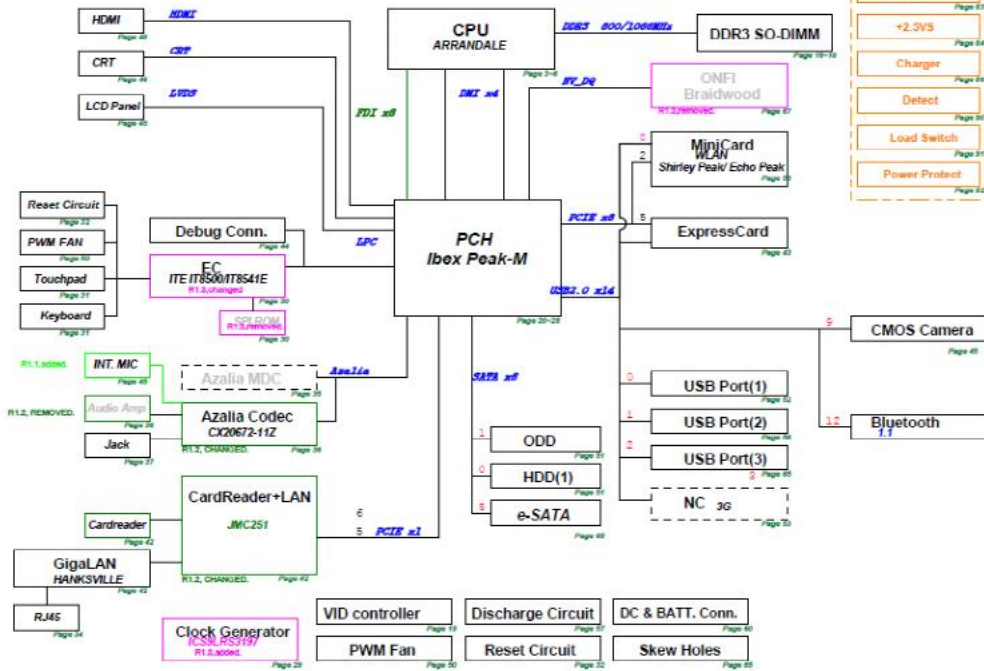

### Power

VCORE

System

1.5VS & 1.05VS

DDR & VTT

+2.3VS

Charger


Detect


Load Switch

Power Protect

# U50F Repair Guide

2009/11/16  
Janmou\_chang  
CSC-GRMA

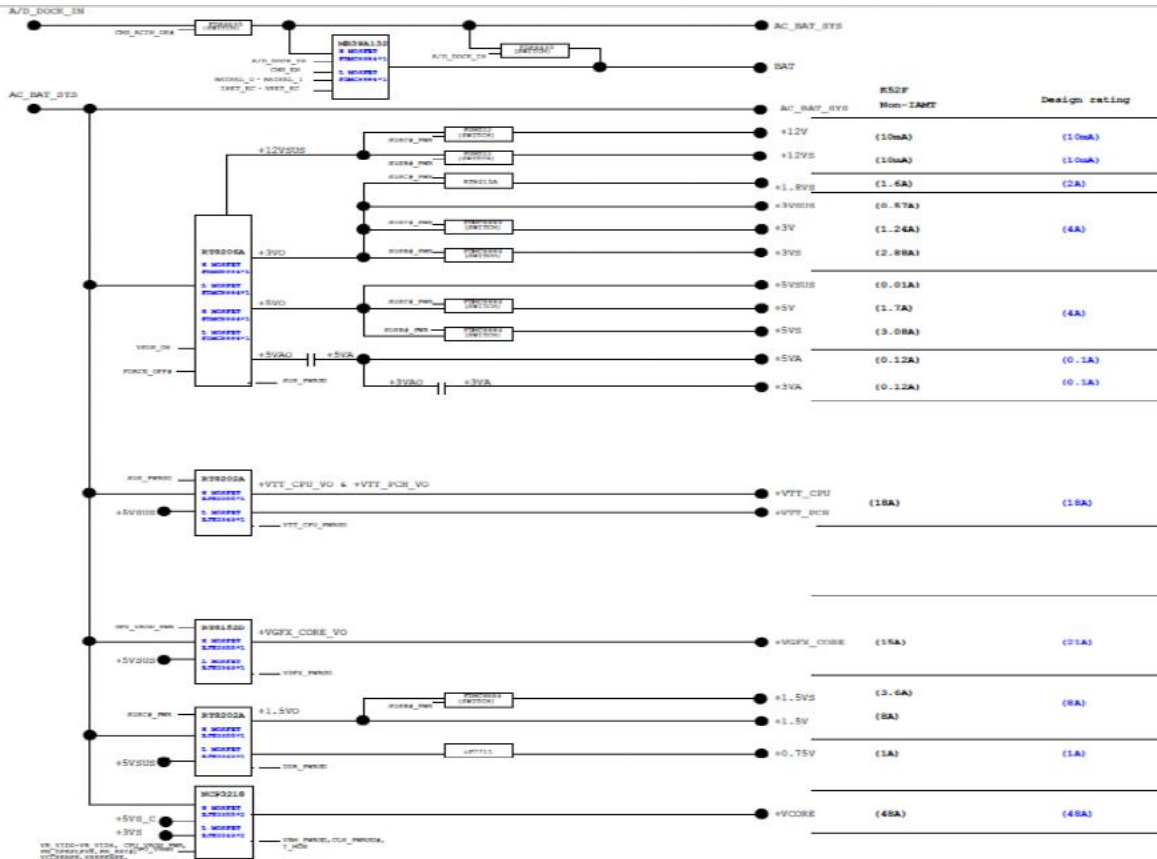

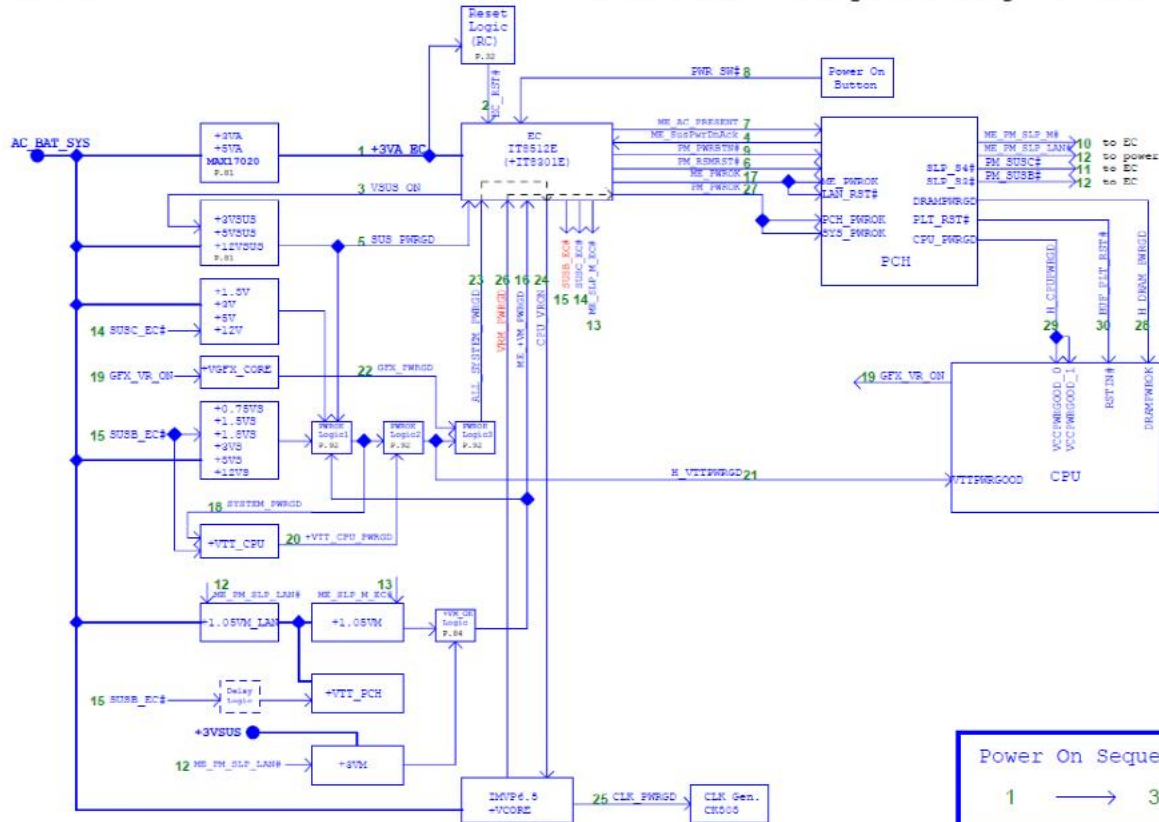

# U50F Repair Guide(TOP)

2009/11/16  
Janmous\_chang  
CSC-GRMA



# U50F Repair Guide(Bottom)

2009/11/16  
Janmous\_chang  
CSC-GRMA

